CP9000 CP9000[SR] CP9000-AS


CP9000-WS CP9000-AS [SR] CP9000-WS [SR] C9000-AS-WS


C9000-AS-WS [SR]




## **Passthrough Warewasher**

**Quick Install Guide** 

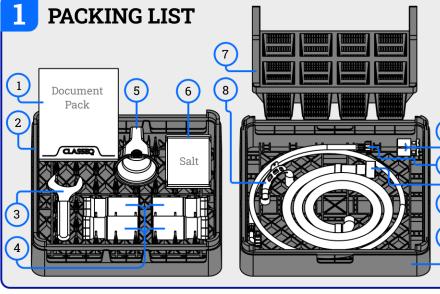

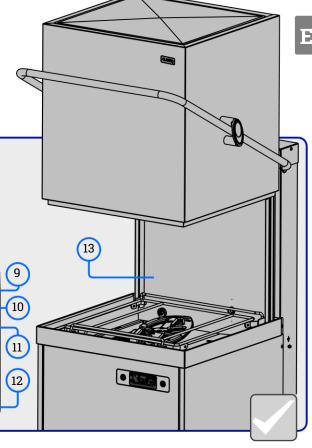

## ATTACHING FEET

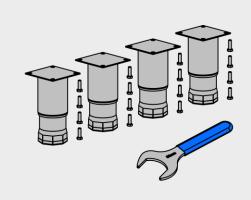


LOCATE

FIT


x4 feet (4) / x16 bolts (4) / 58mm spanner (3)

Feet (4) to base using an 8mm spanner (3)

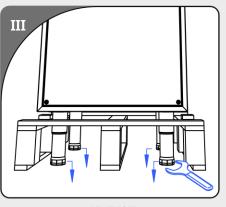


**ADJUST** 

Adjust the feet until the machine is lifted from the pallet

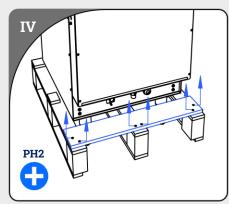


**REMOVE** 

Unscrew the rear board from the pallet using the PH2 screwdriver and remove.

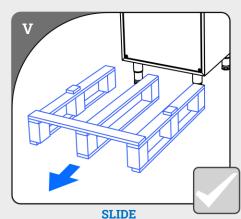


Slide the pallet out from under the machine from the front.


Document Number: 90002221

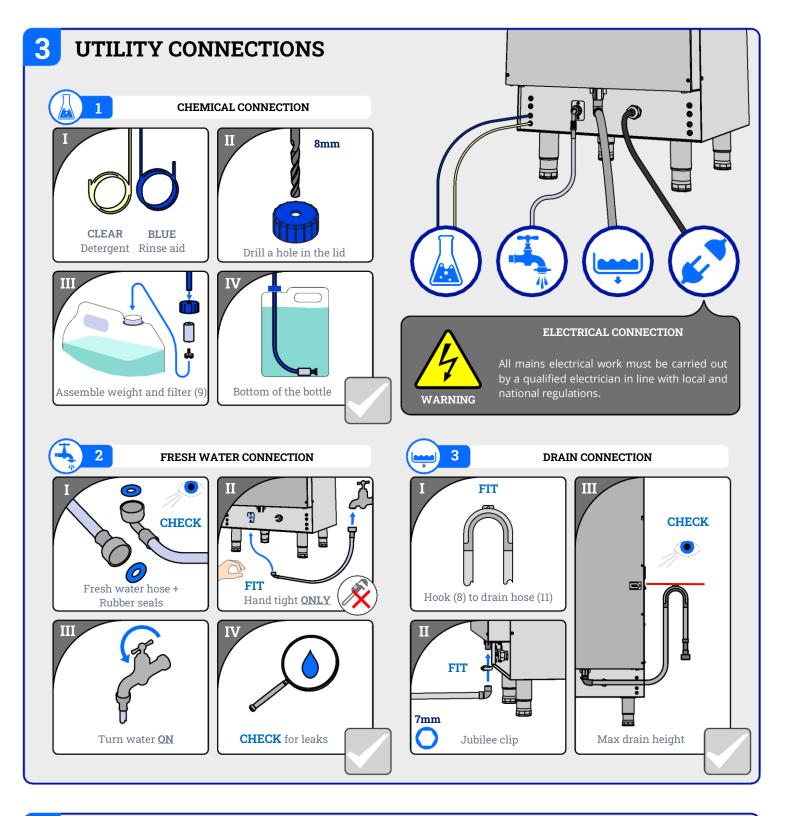



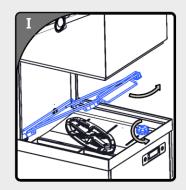

Remove the basket ramp Unfasten the cap

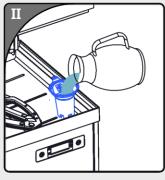

Insert the salt funnel (5) Fill with fresh water



Pour in dishwasher salt (6) Max grain size 7mm





then fasten cap by hand

90002221 Document Number: Revision:






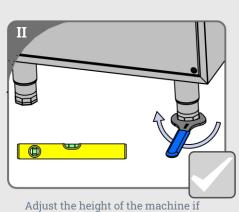

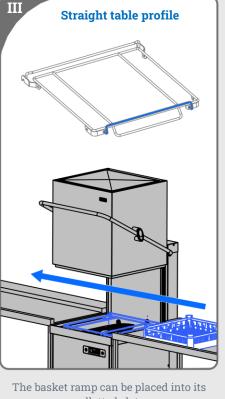

allotted slot

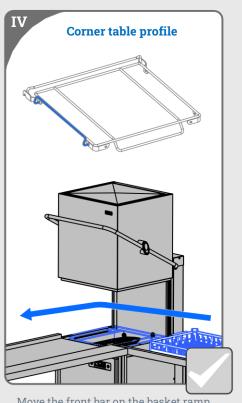

Move the front bar on the basket ramp to your required side

## 6 **COMMISSIONING**

needed































































## STEAM RECOVERY UNIT (SR Models Only)

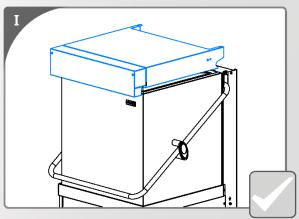

Lift the steam recovery unit into place

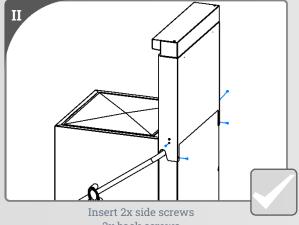



2x back screws




For safety, this activity requires **2 people**.

Risk of trapping hands and fingers. **DO NOT** lift from the bottom. Ensure hands are clear from the connection point before lowering the steam unit.

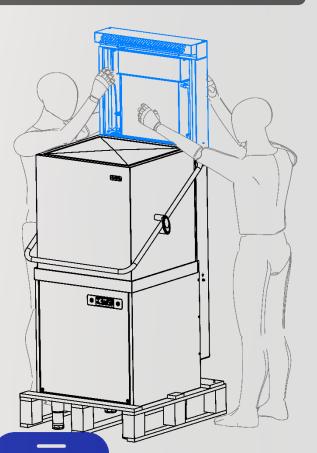

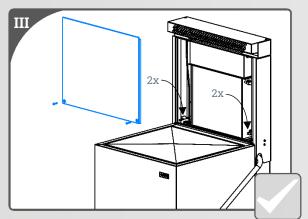

Insert 4x inside screws Place the steam recovery front panel into its location

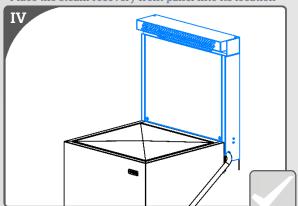

Insert 2x front screws







Simple, Robust