


Program values - P		
Code	Description	Value
P01	Display wash temperature	***
P02	Display wash level	***
P03	Display rinse temperature	***
P04	Display rinse level	***
P05	Display water flow rate (4.0L/min)	dl/min
P06	Display salt float switch status	Full/ Empty
P10	Display door switch status	Open/ Closed
P30	Display model type	****
P40	Wash tank target temperature	°C
P41	Wash tank Interlock temperature	°C
P50	Rinse tank target temperature	°C
P51	Rinse tank Interlock	°C
P60	Rinse Time	Sec
P86	Energy Saving	On / Off

Loads - L		
Code	Description	Value
<b>L00</b>	<b>Wash pump</b>	<b>On / Off</b>
<b>L01</b>	<b>Wash pump + soft start</b>	<b>On / Off</b>
<b>L02</b>	<b>Wash tank heat element</b>	<b>On / Off</b>
<b>L03</b>	<b>Detergent pump</b>	<b>On / Off</b>
<b>L04</b>	<b>Rinse pump</b>	<b>On / Off</b>
<b>L05</b>	<b>Rinse aid pump</b>	<b>On / Off</b>
<b>L06</b>	<b>Wash tank heat element - Spare</b>	<b>On / Off</b>
<b>L07</b>	<b>Rinse tank heat element</b>	<b>On / Off</b>
L08	Inlet solenoid valve	On / Off
L09	Drain pump	On / Off
L11	WS Salt valve	On / Off
L12	WS Waste valve	On / Off
L13	WS Waste valve + inlet valve	On / Off

**BOLD ITALIC - Safety interlock applies**

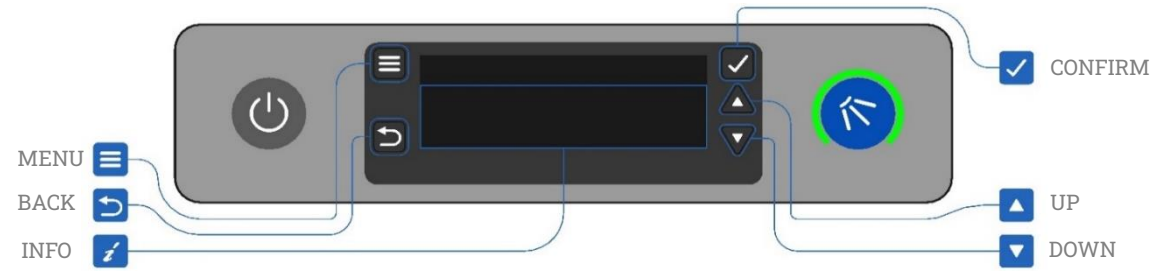

Errors - E (last 39 logged)	
Code	Description
nnn	New day
<b>E01</b>	<b>Wash tank pressure sensor</b>
E02	Wash tank temperature sensor
<b>E03</b>	<b>Rinse tank pressure sensor</b>
E04	Rinse tank temperature sensor
E05	Wash water level unchanged during cycle.
E06	Rinse water level unchanged during rinse.
E07	Rinse tank temperature not achieved.
E08	Wash tank temperature not achieved.
E09	Wash water level unchanged during soft start.
E10	Salt missing
<b>E11</b>	<b>Display communication failure</b>
<b>E12</b>	<b>Wash tank fill</b>
<b>E13</b>	<b>Rinse tank fill timeout</b>
E14	Door switch
E15	Paddle flow sensor
E16	Wash tank overflow
E17	Filter mesh blocked
<b>E18</b>	<b>Rinse tank temperature exceeded</b>
<b>E19</b>	<b>Wash tank temperature exceeded</b>
E20	Power interruption
<b>E21</b>	<b>EEPROM Error</b>
<b>E22</b>	<b>Invalid machine type</b>
E25	Drain pump failure
E28	Service Reminder

**BOLD - the machine will enter error mode; this will turn off the machine and illuminate the cycle indicator red.**

Service Menu		
Code	Description	
P	Program values	-
L	Loads	-
E	Errors	-
S	Statistics	-
D	Diagnostics	-

Statistics - S		
Code	Description	Units
S00	Total number of completed wash cycles	***
S01	Total run time (Power connected)	Hours
S02	Total active time (Machine ON)	Hours
S03	Total water usage	Litres
S20	Total number of regenerations	***
S21	Total number of cycles without salt	***

Commissioning / Settings Menu		
	Description	Units
-	Wash mode	Glass/ Dish
-	Alert Sound	On / Off
-	Rinse aid setting (0.5ml/L)	0.1 x ml/L
-	Rinse aid prime	On / Off
-	Detergent setting (2.5ml/L)	0.1 x ml/L
-	Detergent prime	On / Off
-	Water softener setting (30dH)	°dH
-	External water softener reminder	On / Off

Items marked with backgrounds are only present in machines with water softeners fitted.